



INDOOR ANTENNA RACK USE INSTRUCTIONS

HOW TO USE:

1. Insert the "TO TV" plug for signal output from this unit into the signal input jack on the back Of the TV set.
2. Insert the power plug of this unit into suitable DC power socket.
3. There is a control knob on the front panel of this unit. It can serve as power switch and can also be used to adjust the gain. Turn it to a proper position for the antenna rack to enter working state with suitable gain.

For receiving VHF signals, first turn the telescopic antenna (within 360°) to a proper position, then Adjust the antenna's length and angle to improve the receiving effect, finally adjust the control knob to obtain a proper gain for best receiving effect.

For receiving UHF signals, first turn the HF oscillator frame up and down (within 180°) or sideways (within 180°)

To a proper position, then adjust the control knob to obtain a proper gain for best receiving effect.

4. The FM signals received by the antenna will be amplified by the internal amplification circuit of The antenna rack and then output to the input jack on the TV set through the "TO TV" plug.
5. The antenna direction for the best effect varies for different channels.
6. Program pictures may be distorted when the outdoor antenna is shifted.
7. If the receiving effect remains poor, the cause may be strong electromagnetic field or other major Interferences in the area.

CAUTIONS:

Please read through this instructions before use.

Please keep this unit out of reach of little children or pets.

Please unplug the power cord if you plan to travel for some time or to stop use of this unit for a long time.



*The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

*Mains plug is used as the disconnect device. It shall remain readily operate and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

*The marking plate is located at the bottom enclosure.

*No naked flame source such as lighted candles should be place on the apparatus.

*The use of apparatus in moderate climates.

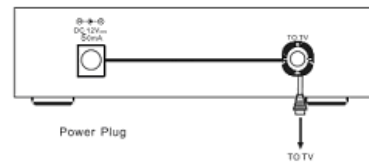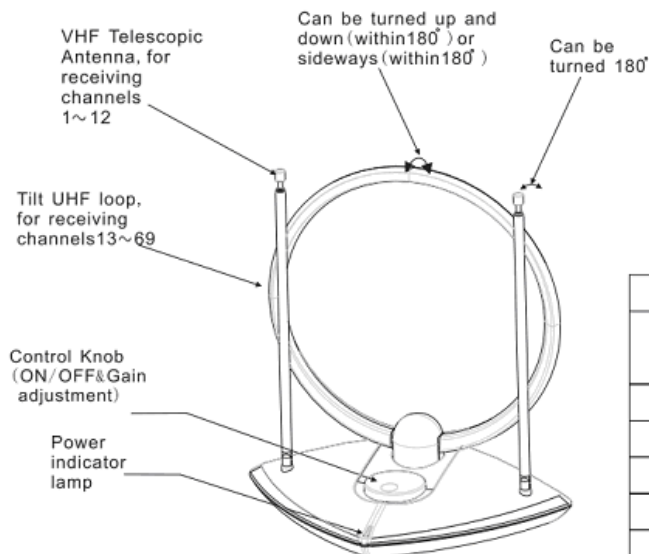

Model No	T-415A
Frequency Range	VHF: 40~230MHz UHF: 470~862MHz
Gain	VHF: 36dB UHF: 45dB
Max Output	100dB
Noise	≤ 3dB
Input Resistance	75 Ω
Power Voltage	<input type="checkbox"/> AC230V/ 50Hz DC12V 50MA <input type="checkbox"/> RF DC 5V 40MA